

~READ DOWN FROM HERE:

~Restore Default:

||||| \$\$\$*

~Set RS232 Interface Selection:

||||| \$\$\$CP0\$-

~Enter Configuration:

~Code Selection

||||| \$\$\$

||||| AZ0

||||| AA1

||||| AAG1

||||| AAH1

||||| AAJ1

||||| AAI1

||||| \$-

||||| \$\$\$

~Interface

||||| CD7

||||| \$-

~Exit and Save configuration: